
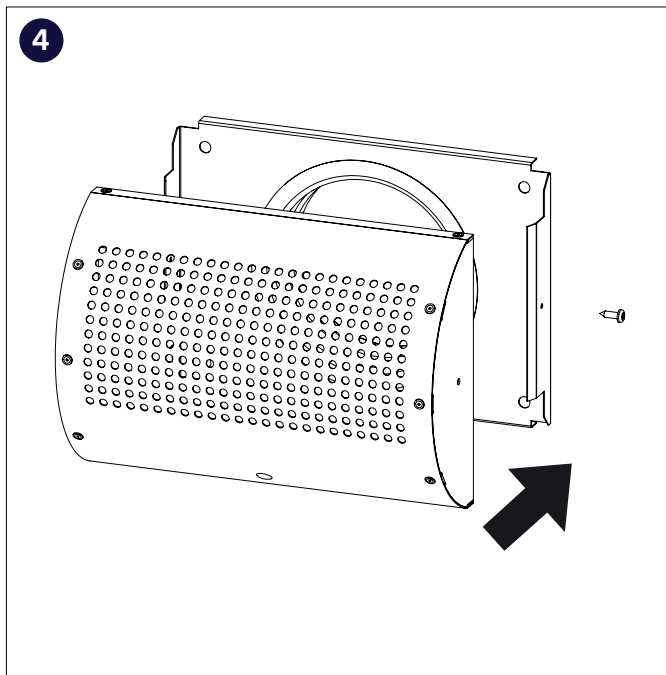
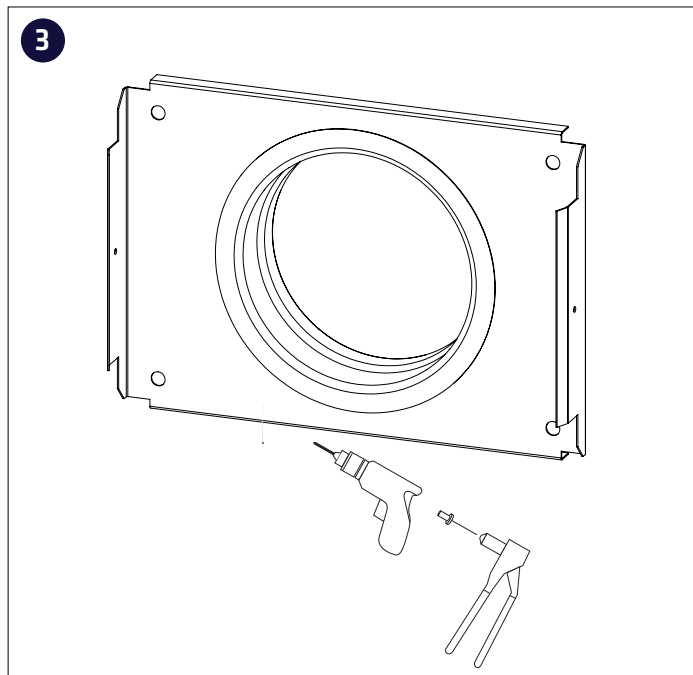
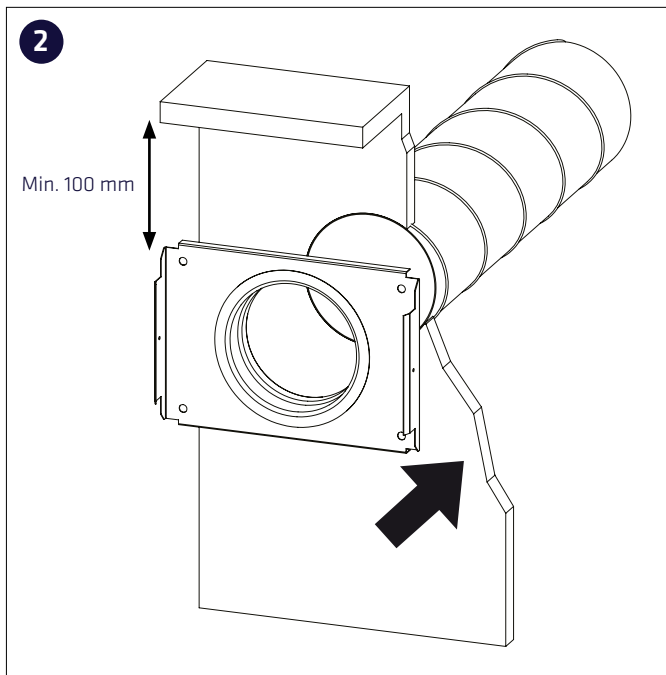





OKE-L

Asennusohje / Montering / Installation

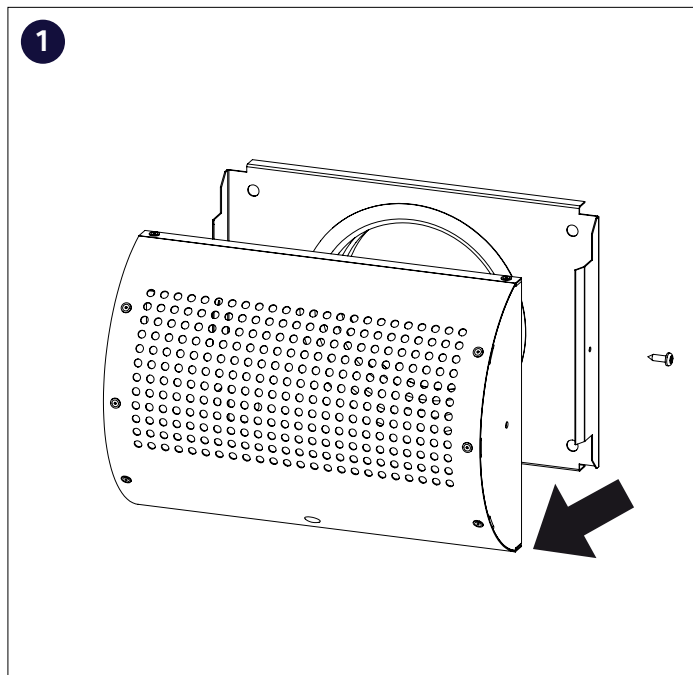




OKE-L

Huolto-ohje / Skötsel / Maintenance

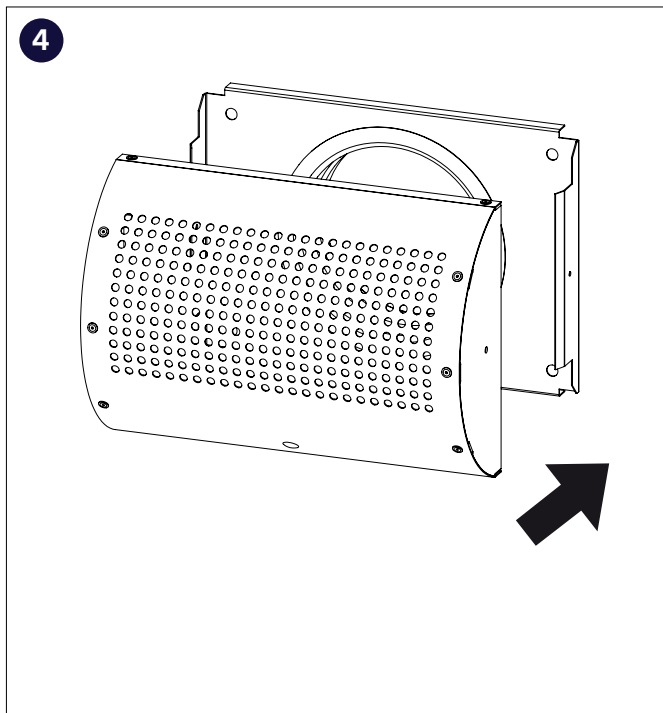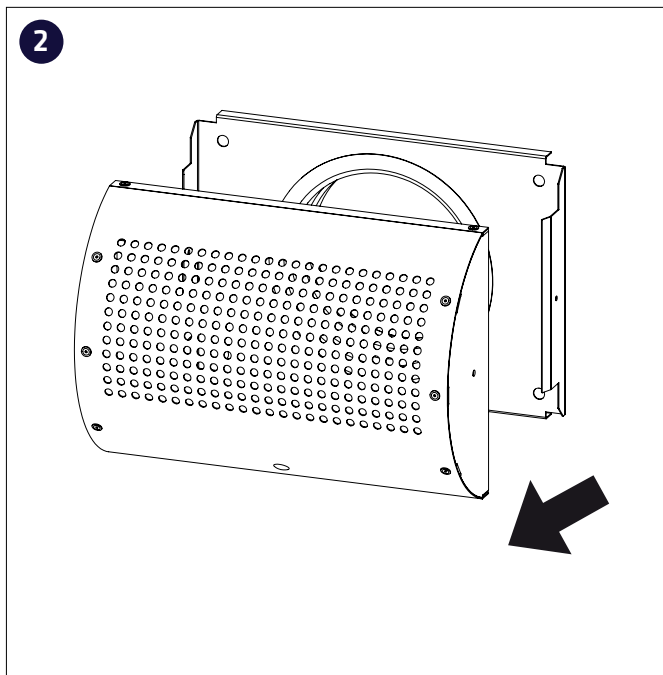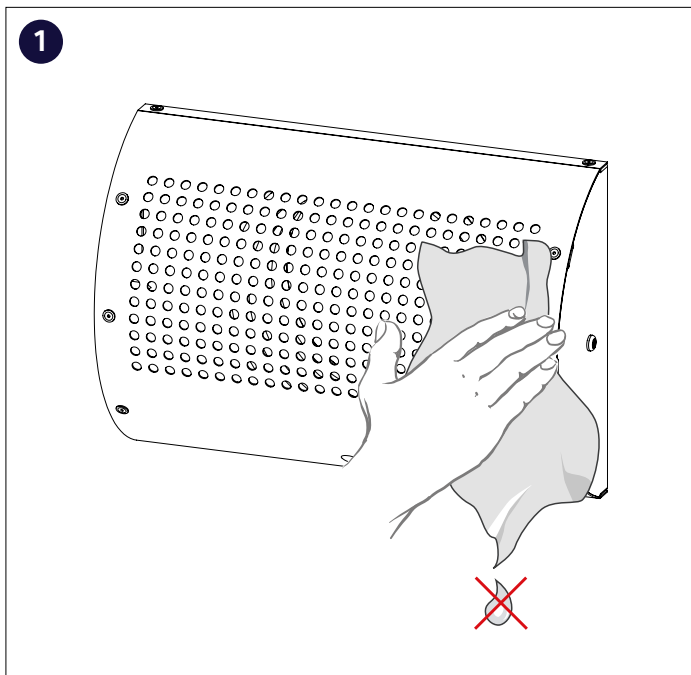

OKE-L

Säätöohje / Injustering / Adjustment

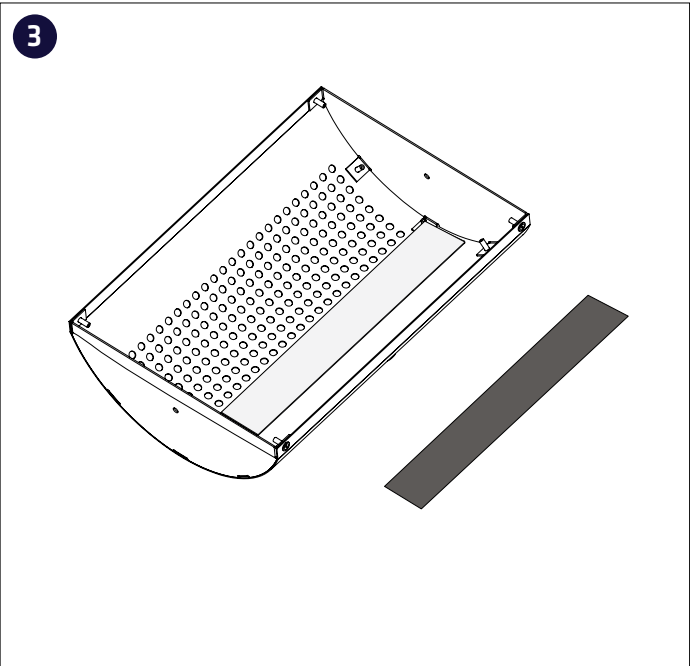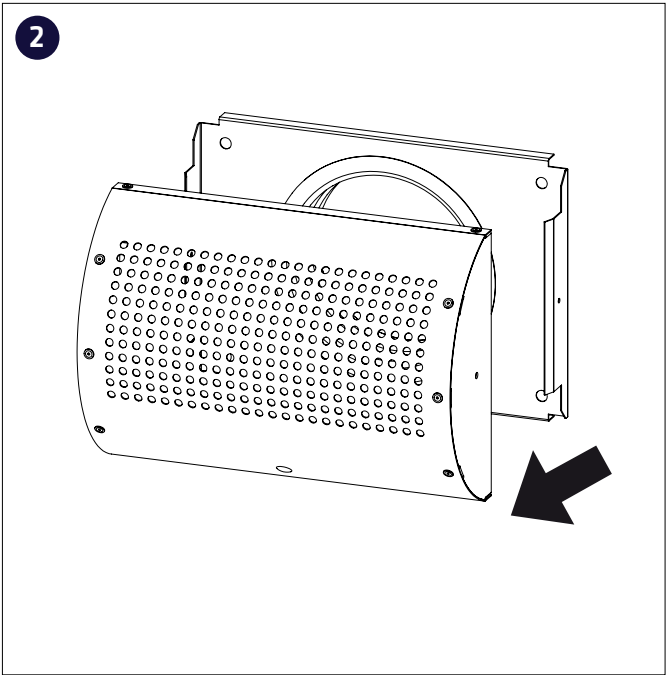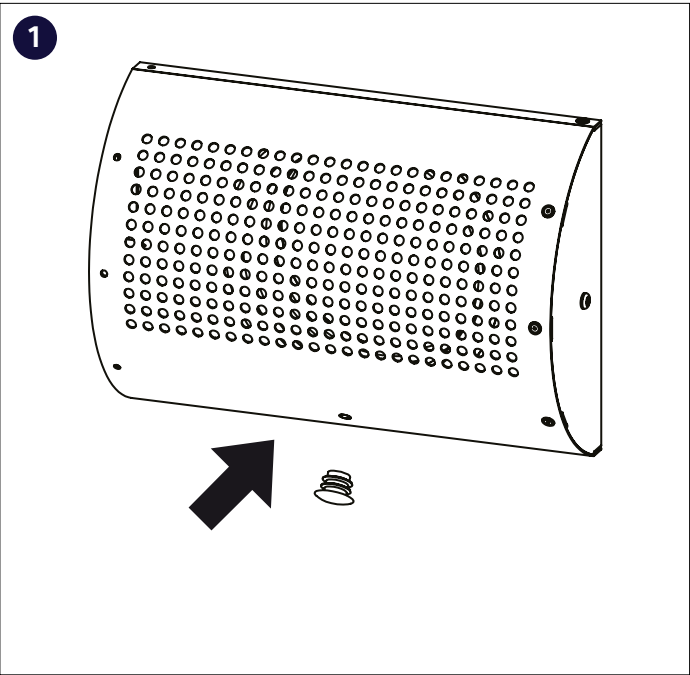

$q_v = k \cdot x \cdot \sqrt{\Delta P_m}$

	k				
	OKE-L				
	100	125	160	200	
Vaakariviä suljettu Horizontal rows closed	0	3,5	6,0	9,8	15,0
	1	3,1	5,5	9,2	14,2
	2	2,7	5,0	8,5	13,4
	3	2,4	4,5	7,9	12,6
	4	2,0	4,0	7,2	11,8
	5	1,6	3,5	6,6	11,0
	6		3,0	5,9	10,2
	7			5,3	9,4
	8				8,7

$q_v=k \cdot x \cdot \sqrt{\Delta P_m}$	k				
	OKEi-L				
		100i	125	160	200
Vaakariviä suljettu	0	3,5	5,6	9,4	14,1
Horizontal rows closed					